


Blockage Prevention System (BPS) Supplementary Manual


V1 to V2 Conversion



V1

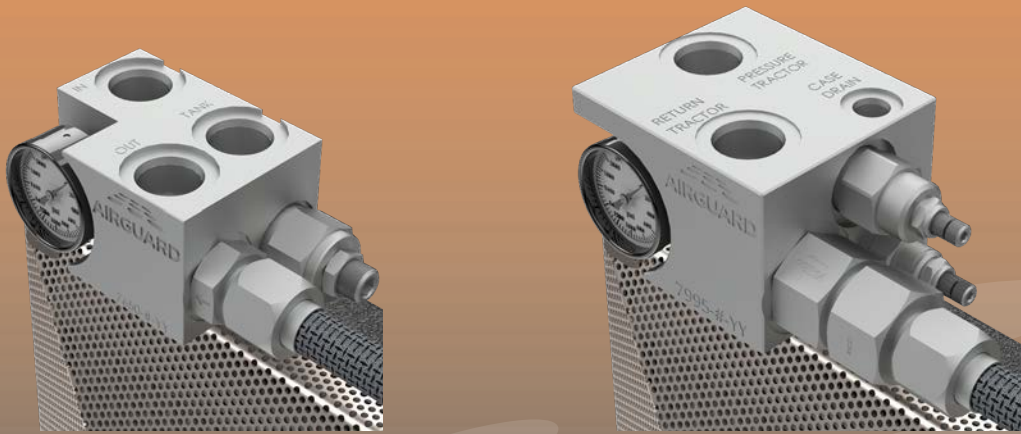

V2

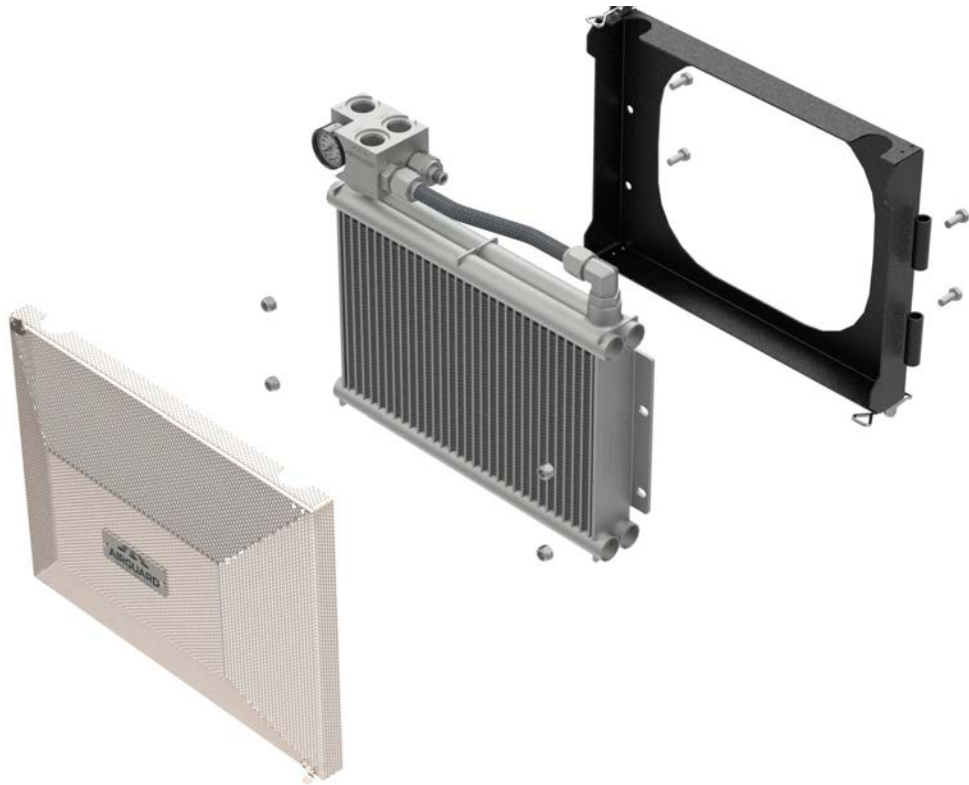

STEP 1

Unlatch and remove screen from BP System Bracket. Unbolt Oil Cooler/Radiator Assembly from BP System Bracket. Keep the 10mm Bolts and Nuts for use in Step 6




STEP 2

Remove the V1 Braided Hose from the V1 Manifold Assembly and elbow fitting.



STEP 3

Remove the V1 Manifold Assembly and 3/4" Union Fitting. Save the Union Fitting for Step 4

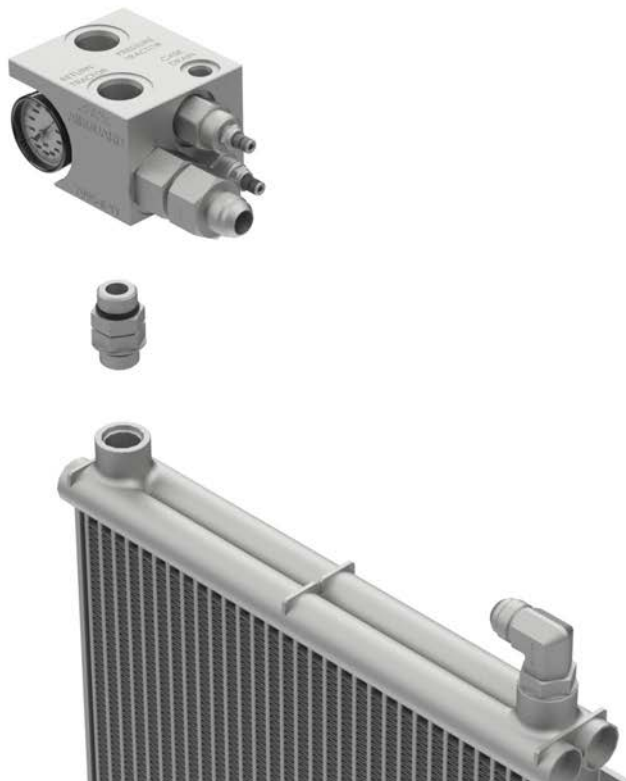

STEP 4

Mount the Union Fitting and V2 Manifold Assembly. **IMPORTANT: Do not adjust the valves on the V2 Manifold.**



STEP 5

Mount the V2 Braided Hose to the V2 Manifold Assembly and elbow fitting.



STEP 6

Bolt the Oil Cooler/Radiator Assembly from BP System Bracket using the 10mm Bolts and Nuts from Step 1. Replace the Screen onto the BP System Bracket. Refer to Full V2 BPS Instructions Manual for complete hydraulic installation instructions.